


1	Compatible SeaTalk device (e.g. an ST60+ instrument)
2	LifeTag Base Station
3	SeaTalk cable
4	SeaTalk ^{ng} backbone
5	SeaTalk to SeaTalkng converter
6	SeaTalk - SeaTalk ^{ng} converter cable

RS125 GPS connection to SeaTalk - SeaTalkng converter

Important: The GPS connects directly to the SeaTalk connection on the converter. It cannot share this connection with other devices.

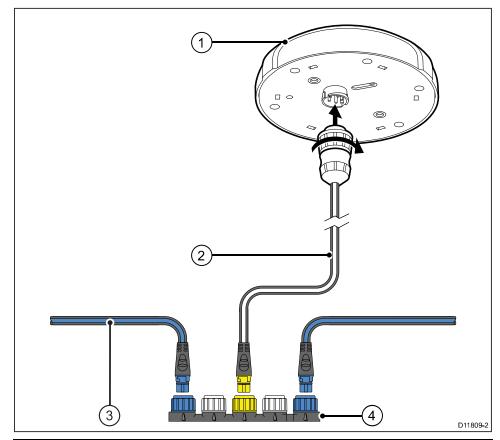

1	RS125 GPS
2	RS125 to converter cable — The GPS must be the only device on this spur.
3	SeaTalkng backbone
4	SeaTalk - SeaTalk ^{ng} converter

Installation 21