


Note: power, rudder position sensor, fluxgate compass (connected to S3G) not shown.

# ITC-5 Setup Issues



Depth (via ITC-5) working but can't configure ITC-5.

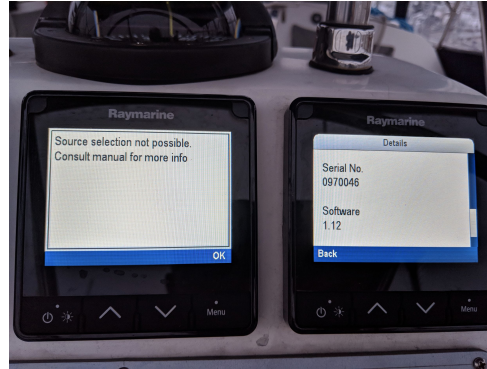

Left: Trying to select Speed source.  
Right: ITC-5 details (Serial No, SW Version).