



WITHIN
INSTRUMENT
POD

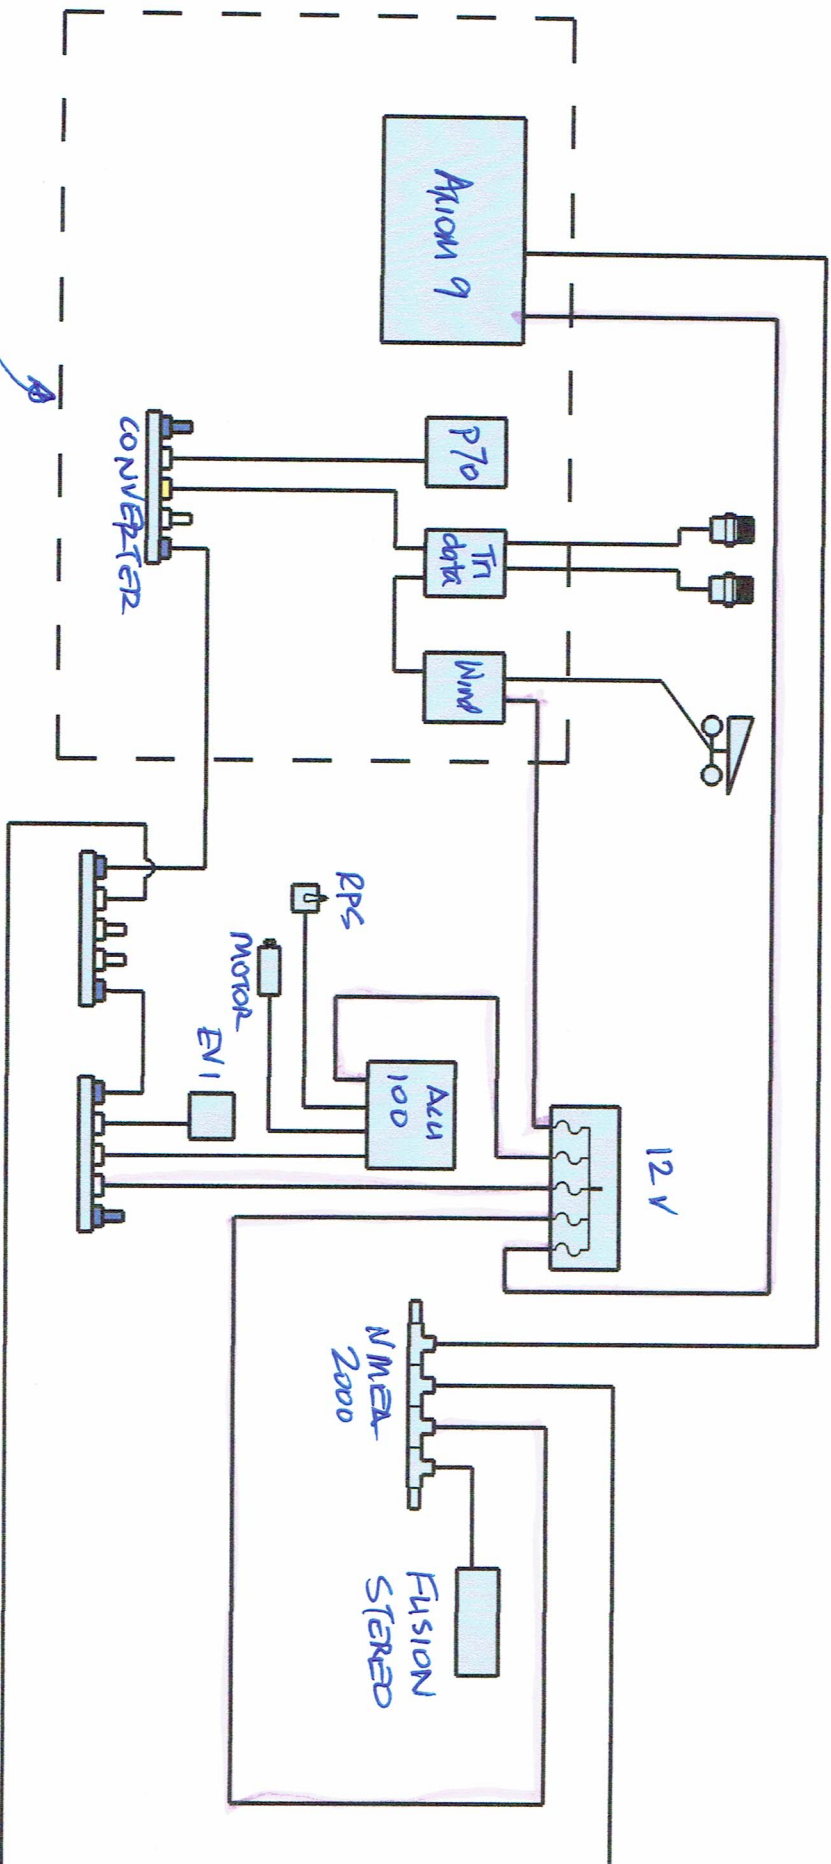

FRANK
ORIGINAL
INSTALLATION

2/14/19

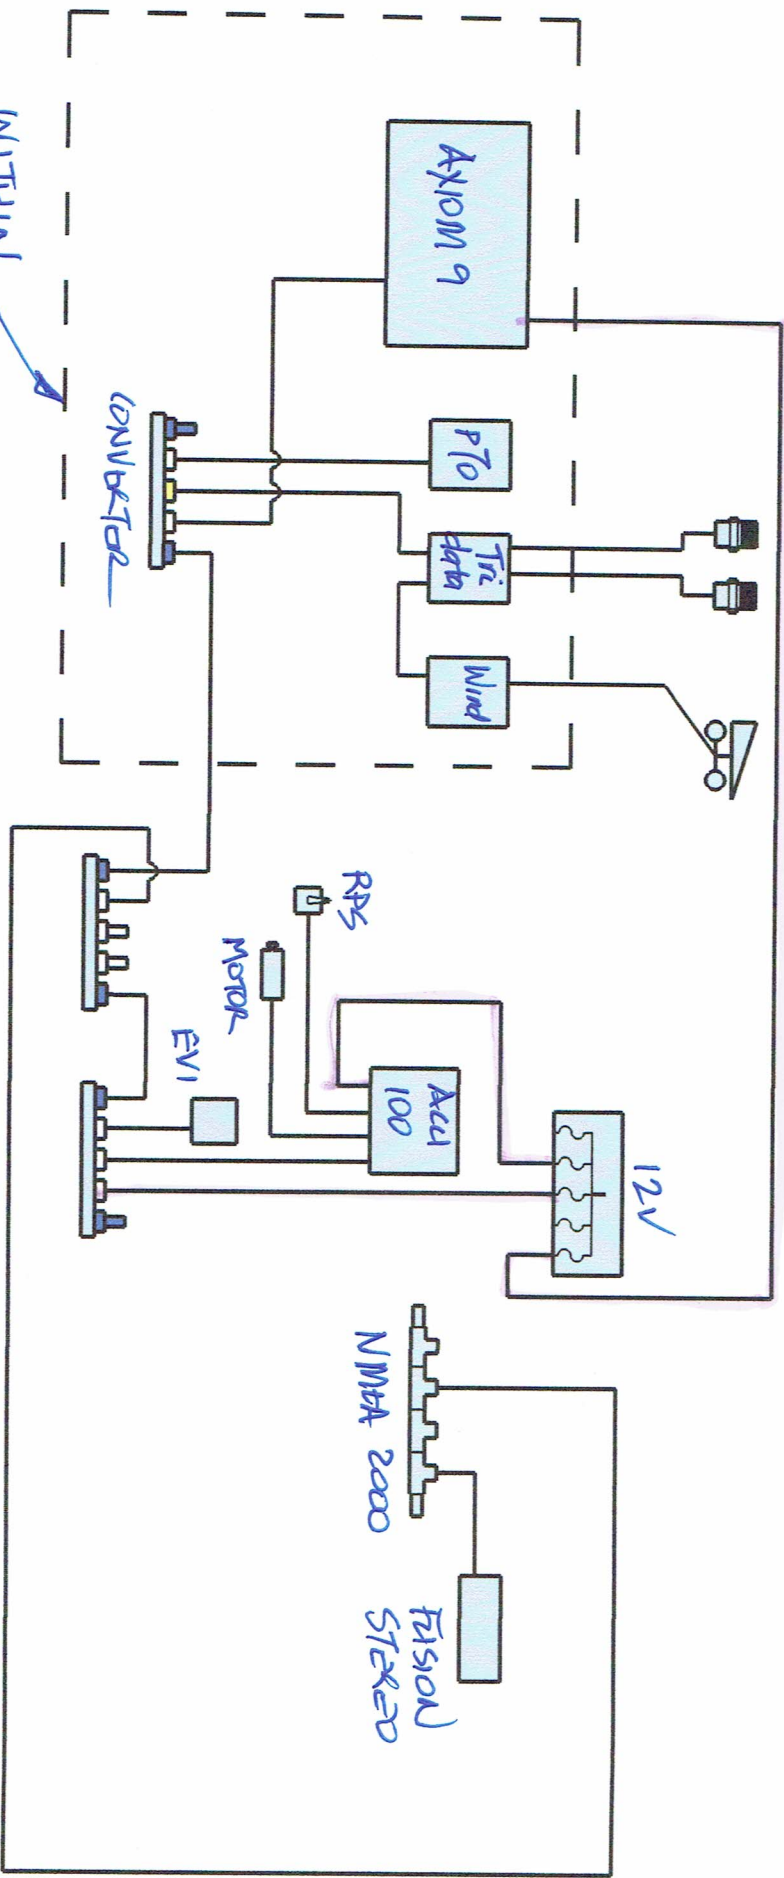

WITHIN
INSTRUMENT
POD

CHANGES FROM ORIGINAL

- 1) REMOVE POWER LEADS TO STROB + WIND + NMEA 2000, LEAVING POWER ONLY TO STNG
- 2) CONVERT AXIOM 9 TO STNG, RATHER THAN NMEA 2000

FRANK

MODIFIED

INSTALLATION

2/14/19